



Swan

designed for life



Hand Blender Set

Model: SP20120N

Helpline

01733 404703

v2.0





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- Do not touch the moving parts and do not insert any kind of object{knives, forks, spoons etc.} while the product is operating.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- NEVER IMMERSE THE UNIT IN WATER



TECHNICAL DATA

Description: Hand Blender Set

Model: SP20120N

Input Voltage: 220-240V


Frequency: 50Hz

Power consumption: 600 Watts





HOW TO USE

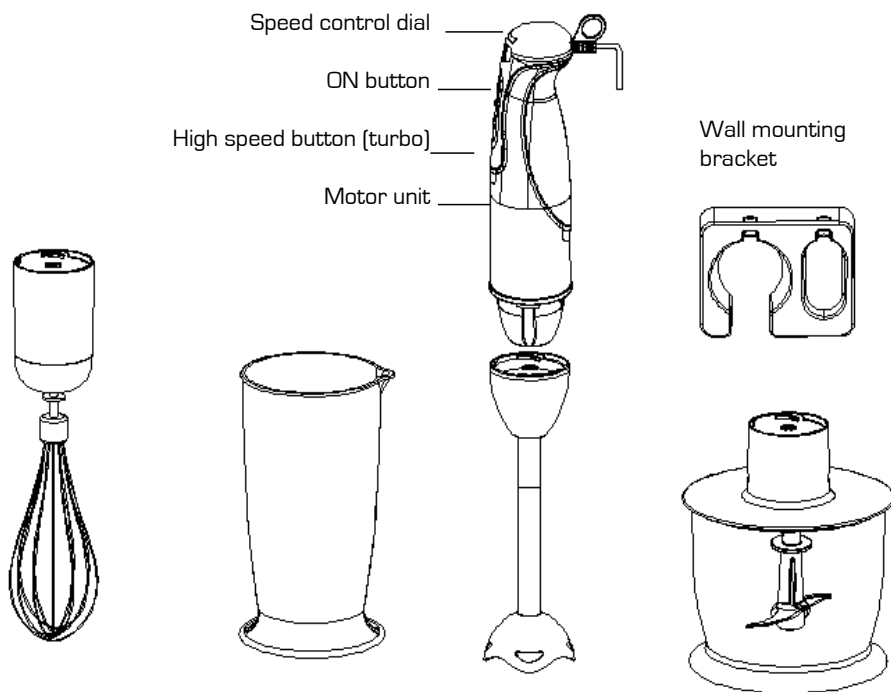


Balloon whisk.
Turn anti-clockwise
to lock onto moto
unit. Turn clock-
wise to unlock

Cup (700ml)

Stem. Turn anti-
clockwise to lock
onto moto unit.
Turn clockwise to
unlock

Chopping bowl

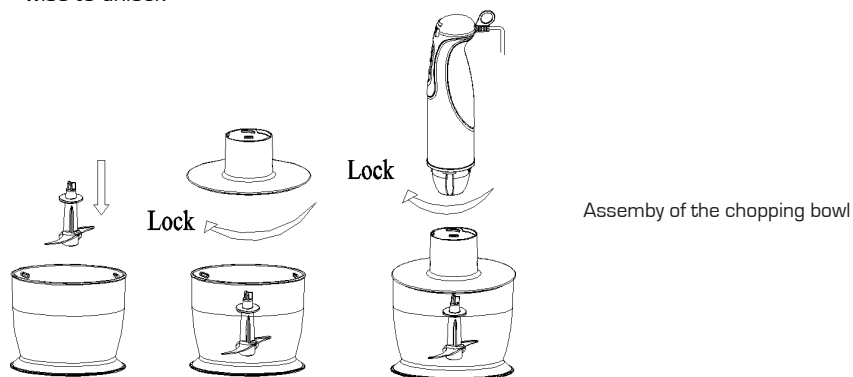



HOW TO USE

IMPORTANT

Before using for the first time, remove all packaging and throw away any blade covers. Wash the removable parts in warm soapy water, rinse and dry thoroughly.

With heavy mixtures, don't use your hand blender for longer than 30 seconds in any four-minute period - it will overheat. The appliance is intended domestic for use only

TO USE THE HAND BLENDER

You can blend baby food, soups, sauces, milk shakes and mayonnaise. For beaker blending Don't fill the beaker above 500ML.

FOR SAUCEPAN BLENDING

Take the pan off the heat and let it cool slightly. Otherwise your hand blender could overheat.

1. Fit the power handle inside the blender shaft, turn and lock.
2. Plug in. To avoid splashing, place the blade in the food before switching on.
3. Hold the power handle steady. Then press the button. Don't let liquid get above the join between the power handle and blender shaft. Move the blade through the food and use a stabbing action. If your blender gets blocked, unplug before cleaning.
4. After using, unplug and dismantle.

TO USE THE CHOPPER

You can chop meat, cheese, vegetables, herbs, bread, biscuits and nuts. Don't chop hard foods such as or chocolate - you'll damage the blade.

1. Remove any bones and cut food into 1-2cm cubes.
2. Add your food
3. Assemble the chopper bowl as shown and attach the motor unit.
4. Plug in, hold the bowl steady, and then press on/off button.
5. After using, unplug and dismantle.

TO USE THE BALLOON WHISK

You can whip light ingredients such as egg whites; cream; instant desserts; and eggs and sugar for whisked sponges. Don't beat heavier mixtures (eg. margarine or sugar), you'll damage the whisk.

1. Attach the balloon whisk to the motor unit
2. Turn anti-clockwise to lock.
3. Place your food in a bowl and whisk accordingly.



HOW TO USE

CLEANING

Switch off and unplug before cleaning. NEVER immerse the power handle in water or run it under the tap.

All other items can be washed in warm, soapy water - rinse and dry thoroughly.

IF USING FOR BABY FOOD, USE A PROPRIETARY STERILISING SOLUTION FOR CLEANING.



DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive(s):

2004/108/EC The EMC Directive (the Electromagnetic Compatibility Directive).

2006/95/EC. The LVD Directive (Low Voltage Directive).

2011-65-EU. The RoHS directive (Restriction of Hazardous Substances Directive)

EC 1935/2004 Food Contact



WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials of workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



Swan





BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO EARTH TERMINAL



DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

